

# iCT Hookup detail

## IMPORTANT

The sensor vent tube must be positioned so as to prevent direct ingress of moisture.  
If located within a housing the housing must be vented to atmosphere

## Alternatively

An extended vent tube (customer supply) must be fitted in areas where flooding or hose wash down are likely.  
6mm (1/4") od plastic tube is suitable and should run to a dry area which is at the same atmospheric pressure as within the tank.

