

# User Guide For Multi Hold Cargo Vessels

## 1/ Acknowledging Alarms

Press enter so HELD is visible & using the up & down arrow highlight the required channel with the cursor (>), press enter then 0/Ack this will cancel the selected alarm only. Press Esc to return to run mode.

## 2/ Page selection for multi hold systems

Press enter so HELD is visible & use the left & right arrows to view next or previous screen

## 3/ Self Test Function



Press enter so HELD is visible then press 2/FC. Highlight the required test you wish to perform with the cursor (>) & follow the on screen instructions

## 4/ Default Alarm Settings

Pre & Main alarms are factory set to 20% & 95% respectively.

Refer to current Solas regulations for actual requirements & follow the PSM manual if any changes to setpoints are required.

## Input Terminal Board Connections

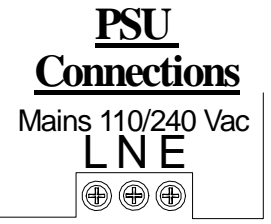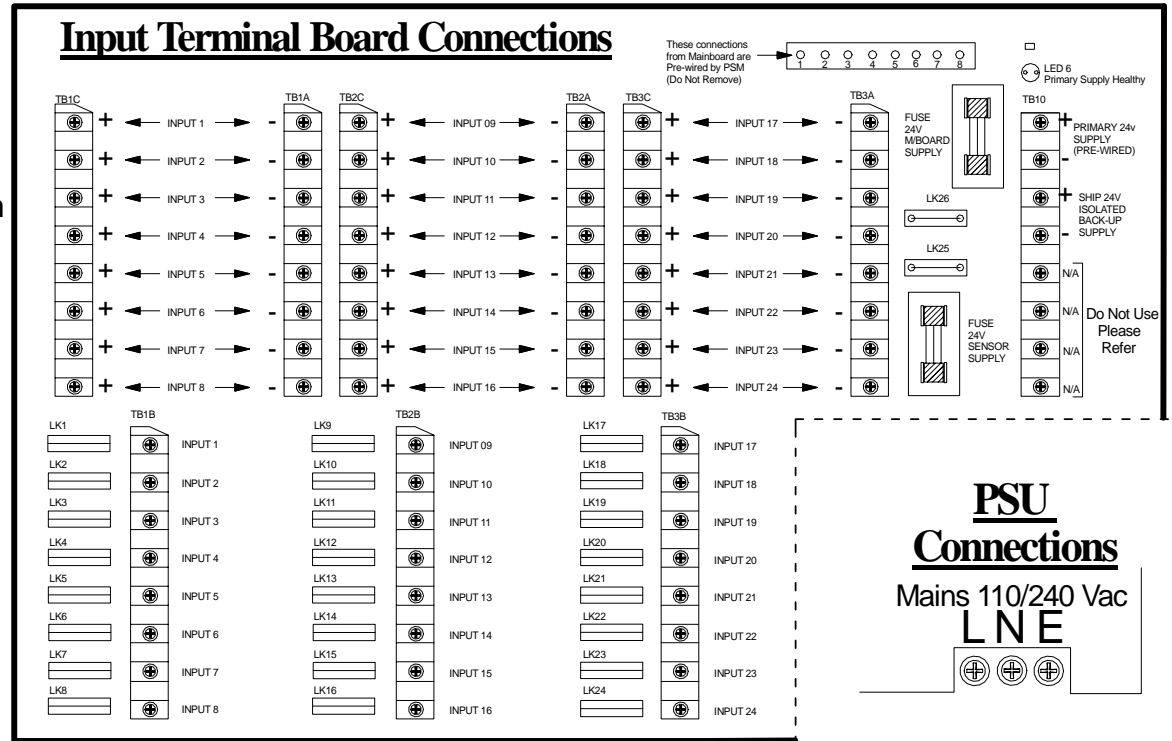

Man 046B

Cut out where marked, laminate & stick to the inside 4200