

MTU 2200 Series User Guide

1/ Page Selection

In normal operation the screen will auto scroll through all channels, to view a specific channel press ent so HELD is visible & use the left & right arrows to view the next or previous screen.

2/ View Resultant Configuration

From run mode press ent then use the up & down arrows to highlight the required channel with the cursor (>).

Press ent 3 more times to view the configuration.

To view the configuration of any previous or subsequent channels simply use the left & right arrows.

To return to run mode press esc.

3/ SG Change

From run mode press 1/SG & use the up & down arrows to view the required channel.

To change the SG value highlight the required channel with the cursor (>) & press ent.

Change the value as required & follow the on screen instructions.

Input Terminal Board Connections

